

Workflow Recommendations

From Revit's Insert tab, select "Load Family" and navigate to the PAL fixture you'd like to use. The type catalog will come up, allowing you to select from most standard configurations available. Remember that the list can be filtered using the header of each field in the catalog to reduce the number of options shown in the list. It may be helpful to have the fixture cut sheet available for reference during the selection process.

Once loaded, the family may be placed on any face or workplane as normal. PAL recommends that changes to options on a pendant be made by reloading the family and using the type catalog to insure that model numbers are correctly assigned. Making changes by Edit Type Properties will not update the model number automatically, and it is possible to enter invalid parameters.

Notes:

1. The Type Catalog includes overall fixture lengths up to XX'-0". Lengths up to 100'-0" are available in 4'-0" increments, but must be manually configured and specified in the Type Properties under the parameter "Overall Row Length".
2. Photometric files should be placed in Revit's default directory for IES files. Due to the way Revit handles arrays of light sources in families, you will need to manually reload the .ies file into the Type Properties.
3. Standard 0-10V, dimming available drivers included. Please consult the factory for additional driver options and adjust the model number accordingly.
4. The default battery pack is included for emergency modules. Please contact factory for battery pack options and adjust the model number appropriately.
5. Standard 80+ CRI is preset. CCT preset is dependent upon the way the fixture was tested photometrically – (usually 3500K or 4000K.) Please contact factory for additional CCT options and adjust the model number appropriately.
6. Fixture finishes and Overall Suspension are user configurable within the family. Please adjust the model number to specify the intended selection.
7. Non-graphic options (Switching, Mounting Type, Emergency Wiring configuration etc.) are not included in the type catalog. Please consult the factory for available options and adjust the model number appropriately.
8. Standard photosensor location is included on select models. Please contact factory for sensor location options.