


# P.A.L. AS350 OUTSIDE CORNER - LENS INSTALLATION & REMOVAL

FOR BEST RESULTS READ ALL INSTRUCTIONS FIRST  
BEFORE INSTALLING OR REMOVING LENS.  
HANDLE LENS WITH CARE

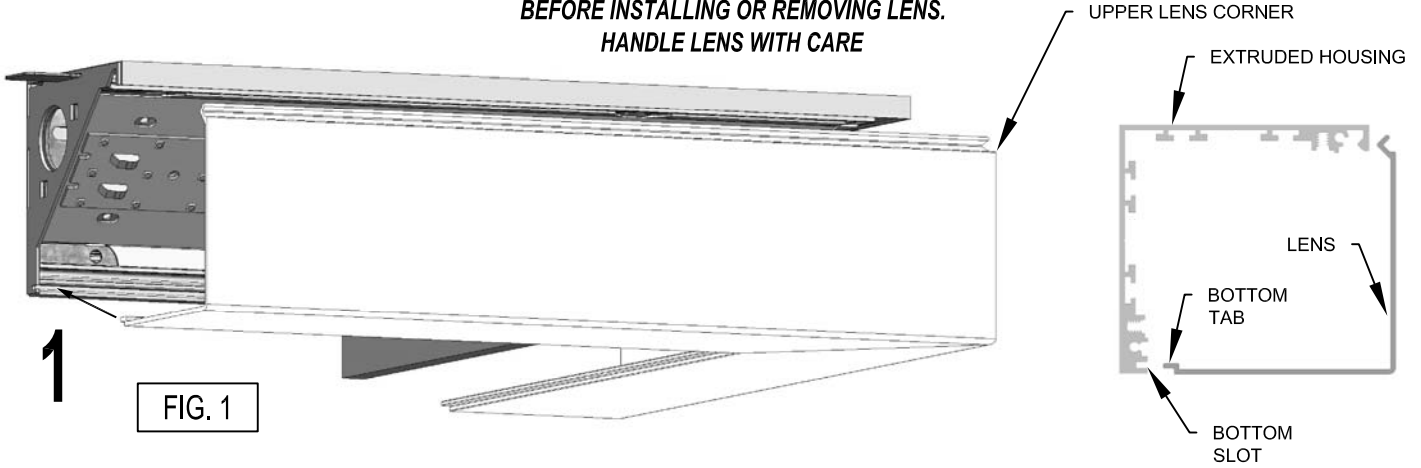

## STEP 1:

ALIGN LENS AS SHOWN IN (FIG 1). INSERT BOTTOM TAB OF LENS INTO BOTTOM SLOT ON FIXTURE. MAKE SURE LENS IS FULLY INSERTED INTO SLOT ALL AROUND FIXTURE BOTTOM BEFORE PROCEEDING.

## STEP 2:


GENTLY PRESS ON UPPER CORNER OF LENS AND PUSH IT TO ENGAGE WITH EXTRUDED HOUSING. (FIG 2)

## STEP 3:

HOLD LENS CORNER IN POSITION, AND THEN STARTING AT THE CORNER OF THE LENS, WORKING OUTWARDS, ENGAGE UPPER PORTION OF ONE LEG OF LENS WITH EXTRUDED HOUSING.

## STEP 4:

WHILE STILL HOLDING THE LENS CORNER IN POSITION, GENTLY PUSH THE OPPOSITE LEG OF LENS INTO EXTRUDED HSG.

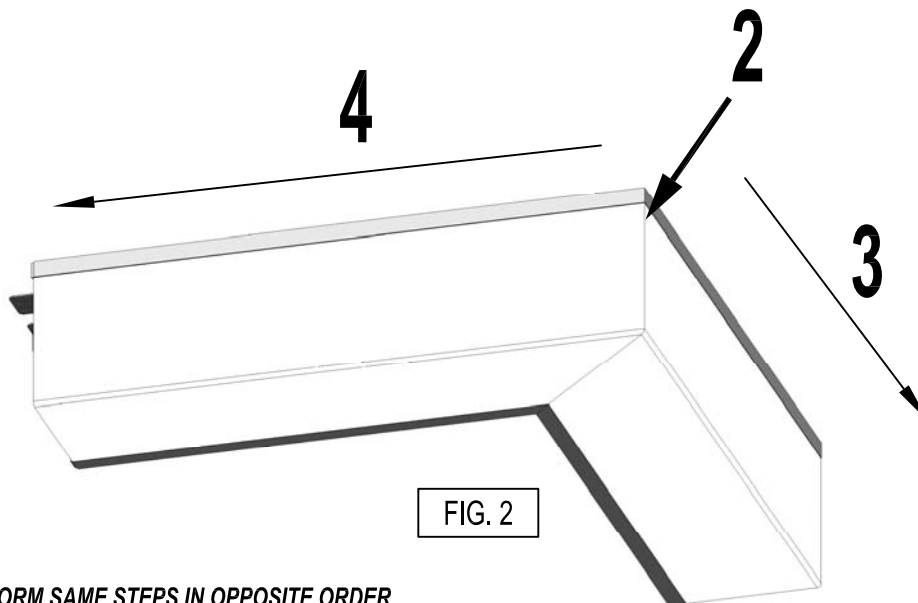

TO REMOVE LENS PERFORM SAME STEPS IN OPPOSITE ORDER.



Precision Architectural Lighting

Tel (713) 946-4343 Fax (713) 946-4441 www.palighting.com

4830 Timber Creek Drive Houston, Texas 77017

PAL RESERVES THE RIGHT TO CHANGE PRODUCT DESIGN AND SPECIFICATIONS. CONTACT FACTORY FOR MOST RECENT PRODUCT INFORMATION.

3750222-1 1/21